





METALMASTER®

LIGHTNING ROD BRACKET

Asbestos-free corrugated sheet

INSTALLATION GUIDE

Lightning rod bracket — asbestos-free corrugated sheet

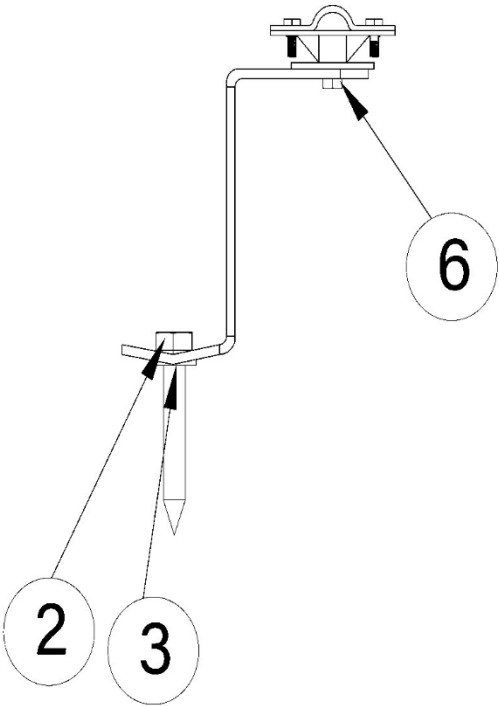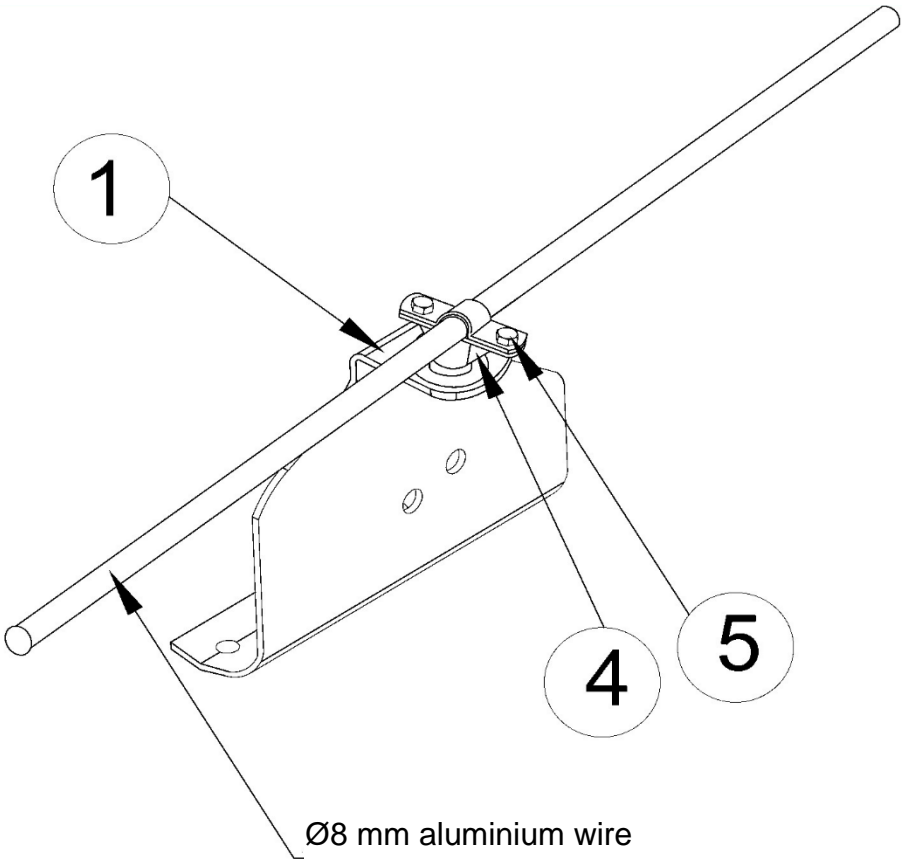

Lightning rod installation kit for asbestos-free corrugated sheet		Kit
Pos.	Name	Quantity
1.	Bracket Z-plate	1*
2.	M8x60 screw	2*
3.	M8 rubber washer	2*
4.	Cable fastener	1*
5.	M6x12 screw	2*
6.	M8x20 screw	1*

* Quantity depends on the number of kits.

** The aluminium wire is cut as one piece of the length specified.

Lightning rod installation

- Plan the location for installation.
- Make sure that the roof structure is stable.
- The lightning rod Z-bracket plate must be installed on top of the roof battens.
- Check to confirm that the roofing is installed according to the roof installation instructions.
- Install the Z-bracket plate by placing it into the roof recess such that the PR-bracket plate is in a vertical position (Figure 1).
- Screw the PR-bracket plate to the roof using 2 M8x60 mm screws and 2 M8 rubber washers (Figure 1).
- Tighten the screws such that the Z-bracket plate holds firmly on the roof material (Figure 1).
- Install the lightning rod wire fasteners on top of the Z-bracket plate and screw them together using the M8x20 screw (Figure 1).
- Place the aluminium wire into the lightning rod wire fastener, securing it with two M6x12 screws (Figure 2).

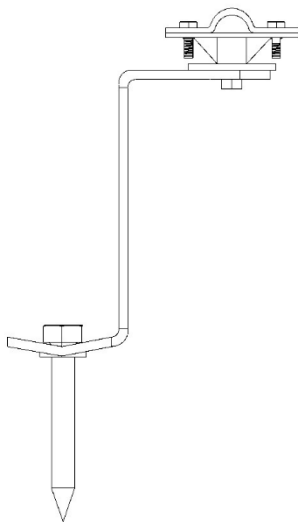


Figure 1.

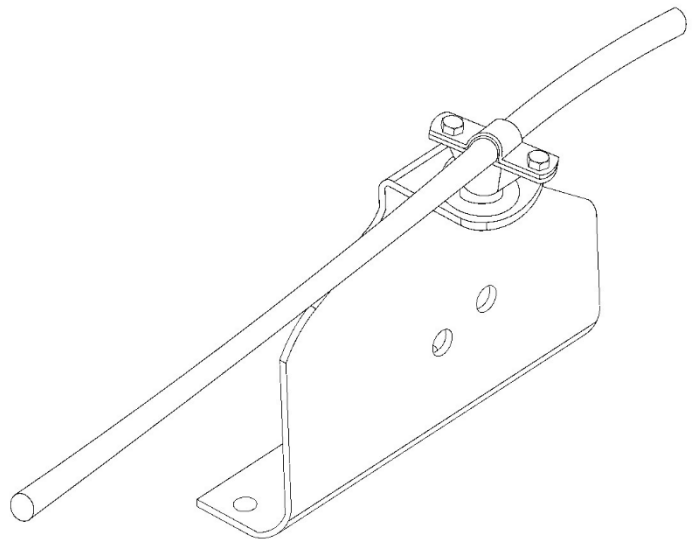


Figure 2.