




METALMASTER®

SAFETY BARRIER WITH SNOW BARRIER

SOLO CLASSICA 480 AND 275
VALC PROFILE

INSTALLATION GUIDE

Safety barrier with snow barrier — Solo 480 and 275/Valc profile, 3 strut height options: 520 mm, 745 mm, and 895 mm

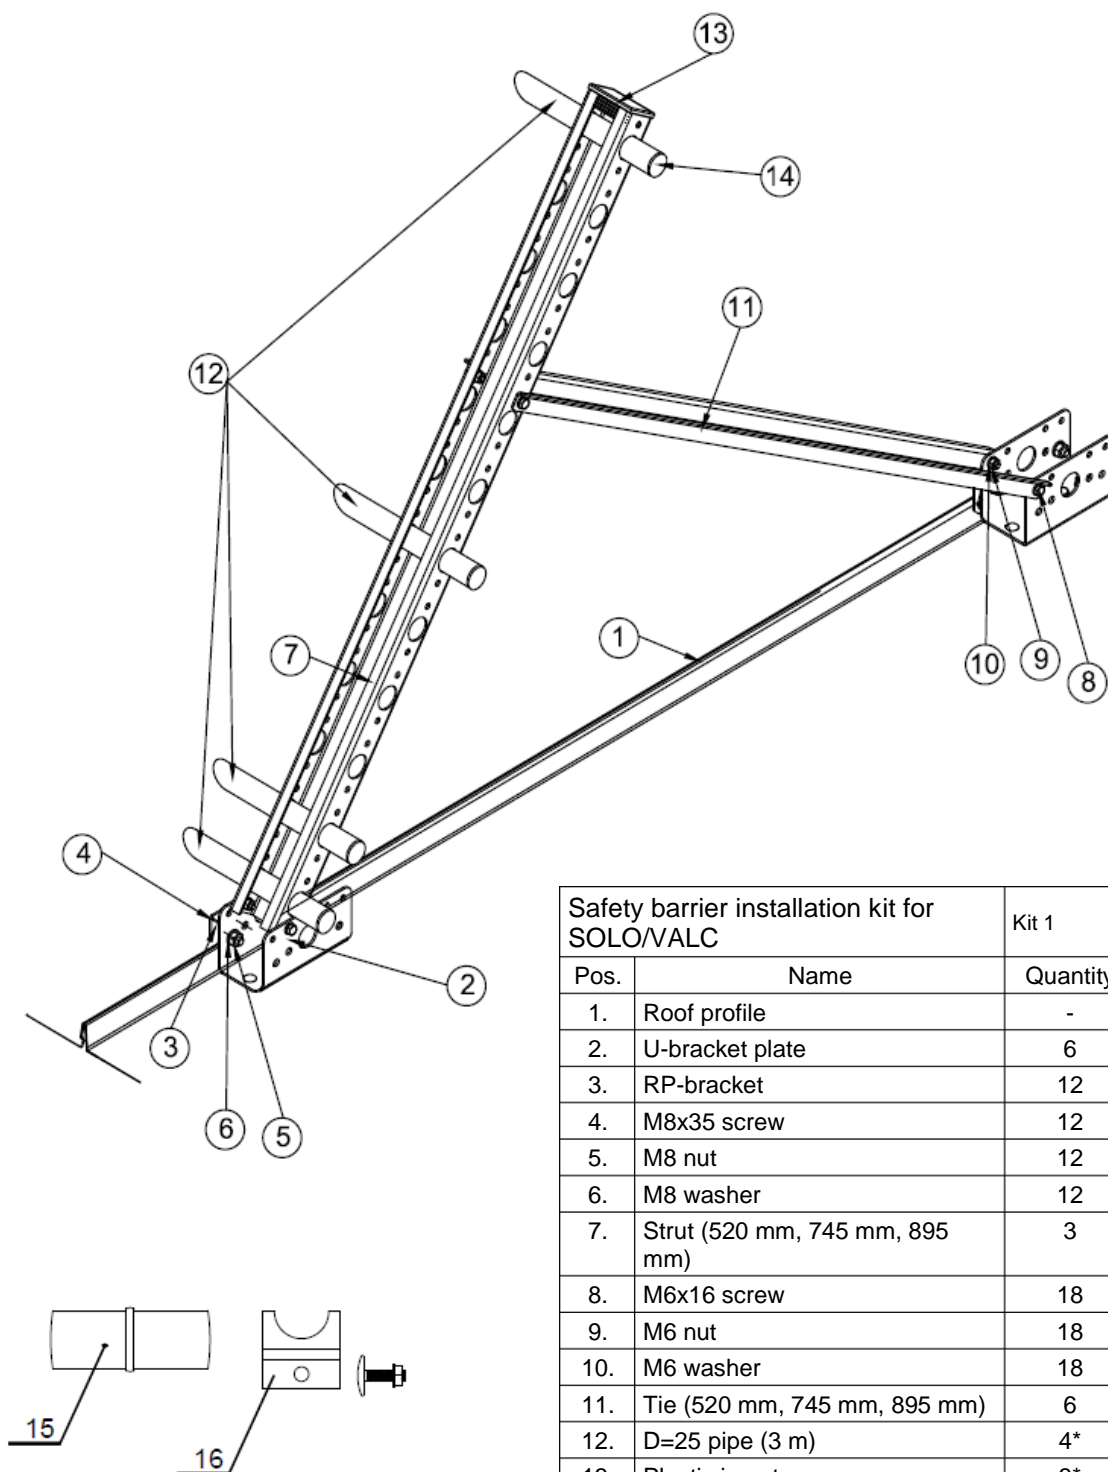

Safety barrier installation kit for SOLO/VALC		Kit 1	More than 1 kit
Pos.	Name	Quantity	Quantity
1.	Roof profile	-	-
2.	U-bracket plate	6	4
3.	RP-bracket	12	8
4.	M8x35 screw	12	8
5.	M8 nut	12	8
6.	M8 washer	12	8
7.	Strut (520 mm, 745 mm, 895 mm)	3	2
8.	M6x16 screw	18	12
9.	M6 nut	18	12
10.	M6 washer	18	12
11.	Tie (520 mm, 745 mm, 895 mm)	6	4
12.	D=25 pipe (3 m)	4*	4*
13.	Plastic insert	3*	2*
14.	Plastic end pieces	8*	8*
15.	Tube connector	4*	4*
16.	Tube clamp with M6x16 screw	4*	4*

* Quantity depends on the number of kits.

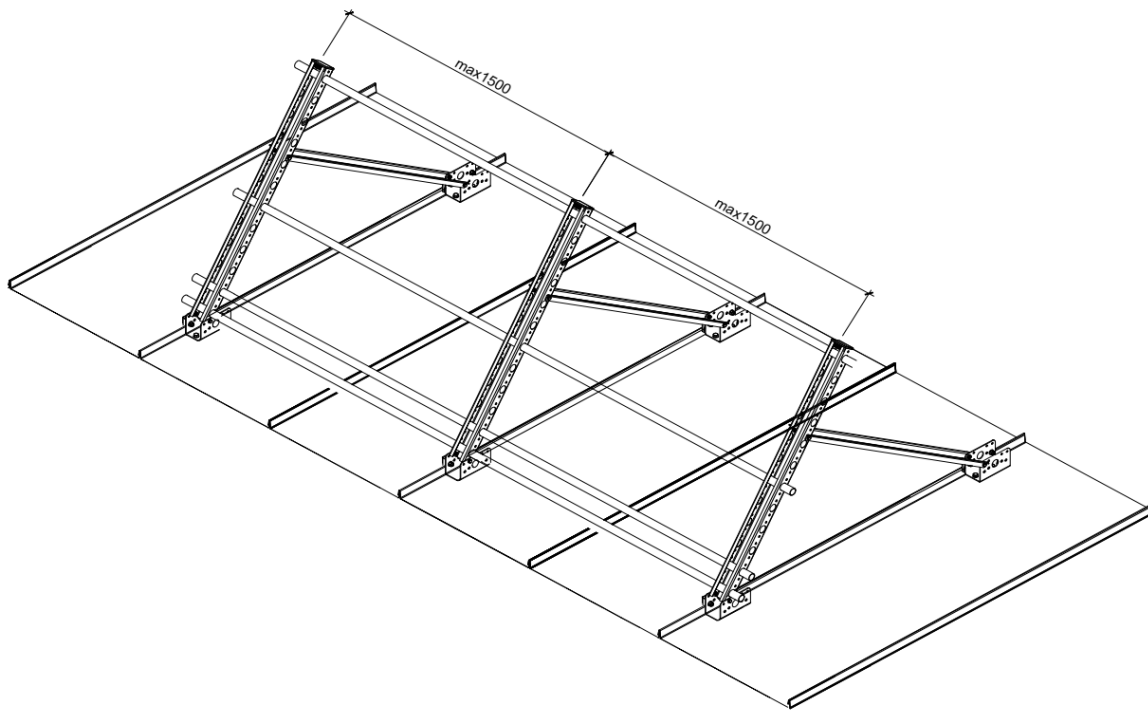


Figure 1.

Application

- A safety barrier is necessary if the pitch of the roof is greater than 5°.
- Safety barriers must be installed to enable safe movement on the roof.

Safety barrier installation

- Plan the location for installation.
- Make sure that the roof structure is stable.
- The safety barrier U-bracket plates must be installed on top of the roof battens.
- Check to confirm that the roofing is installed according to the roof installation instructions.
- Before installing the U-supports, mark a straight line in which you plan to install the safety barrier, e.g., using a coloured chalk line.
- Make sure the safety barrier is installed in a straight line.
- Install the U-bracket plates on one side of the roof seam (Figure 2).
- Place the RP-bracket on the other side of the seam (Figure 2).

- Make sure that the U- and RP-bracket parts are in the position shown in Figure 2.
- Screw together using an M8x35 mm bolt screw, M8 nut, and washer (Figure 2).
- Tighten the screws such that the U-bracket plate holds firmly on the roof material (Figure 2).
- To the U-bracket plates, attach the strut and the ties using 6 M6x16 screws with nuts. The strut must be fastened in a vertical position (Figure 3).
- Place the tubes in the designated locations. The maximum distance between struts is 1500 mm (Figure 1).
- The tubes are secured with a tube clamp.
- Barriers can be easily extended by connecting the individual tubes with connectors.

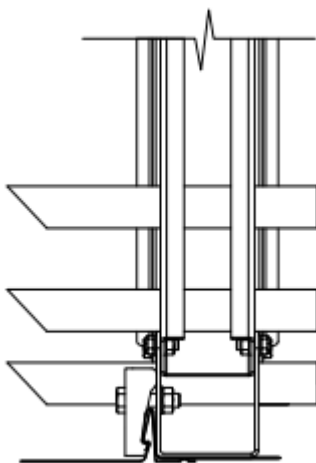


Figure 2.

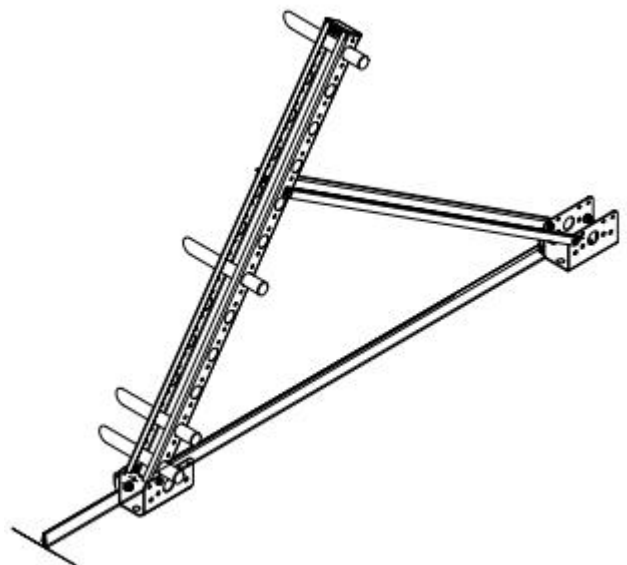


Figure 3.